

INSTRUCTION MANUAL

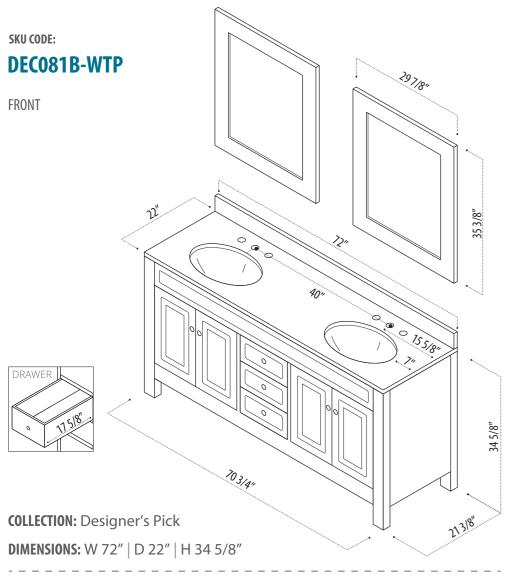

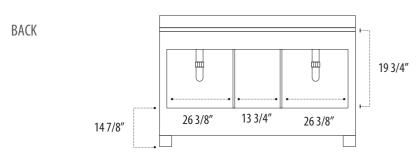

PACKING LIST

- Pre-assembled cabinet
- Countertop
- 2 Sinks
- 2 Mirrors


- Mirror mounting screws
- Drain
- Instruction Manual


WARRANTY


Design Element warrants cabinets, mirrors, finishes and fittings to be free


ately. These things must be reported no later than 30 days from the date of

Attaching Sink To Counter Top

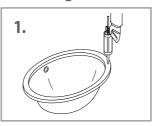




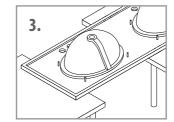




- 1. Apply continuous stream of silicon glue on circumference of the sink.
- 2. Turn the counter top upside down and provide support from beneath. (Note: While turning around the double sink counter tops, always add support from the centre for safety)
- **3.** Put the glued sink over the cutout and attach it firmly.
- **4.** Tie up screws positioned at the respective places on the counter top.
- 5. Don't use the sink instantly. Wait for 24 hours for the Silicon glue to dry.


Attaching Counter Top To Cabinet

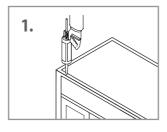


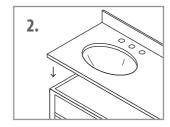



- **1.** Apply continuous stream of quality silicon glue on top of the cabinet contact area.
- **2.** Place the counter top on top of the cabinet.

Installing The Drain On The Sink

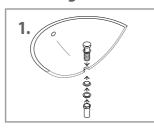

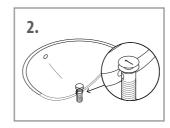


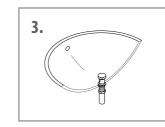


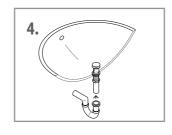



- 1. After you have installed the sink and countertop on the cabinet, put the drain assembly inside the hole in the sink and fix it firmly.
- 2. For only the overflow sinks, make sure that the hole on the drain is aligned with
- 3. Tie up the rubber and metal mounting rings over the drain opening from beneath the sink.
- 4. Now that the drain is installed, you can connect the trap onto the drain.

Hanging Mirror On The Wall

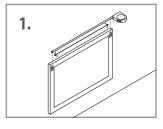



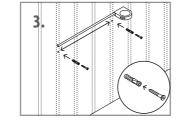


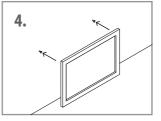

- 1. Measure the distance between the screw holes from the back of the mirror.
- 2. Find the studs on the wall. They are normally 12" to 16" apart from each other. Drill two holes on the studs as per your measurement.
- 3. Insert the plastic plugs into the drilled holes. Insert screws into the plastic plugs. Leave the screws at least 0.5'' - 0.75'' inches outside.
- 4. Hang the mirror on to the screws.

SAFETY AND PRECAUTIONS

- •Please go through this entire manual before attempting to assemble, operate or install the product.
- •During installation, handle the countertop and sink with optimum care.
- •Do not use the vanity instantly after installation. Once you have applied glue to attach the countertop and sink, wait for approximately 24 hours to let it dry.
- •When scrubbing the cabinet, make sure you do not remove or scratch the finish.

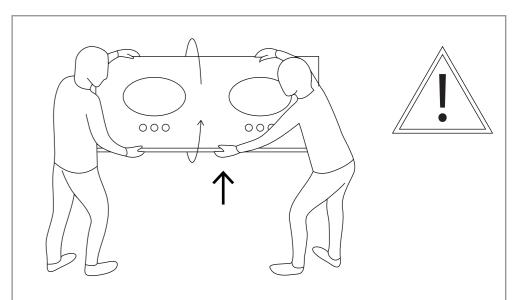

While turning around the double sink counter tops, always add support from the centre for safety

CARE AND CLEANING

- Avoid using any type of rough cleaning material on top of the cabinet
- Use mild liquid soap and water-dampened soft cloth to remove stains from the cabinet and to clean the countertop.
- For the glass part of the mirror, use ammonia-free cleaning products.

CONTACT SUPPORT

PHONE: (888) 487-4488

EMAIL: cs@designelementusa.com

ADDRESS: 8715 Boston place, Rancho Cucamonga, CA. 91730



www.designelementusa.com

from defects in workmanship and materials under normal use and service for a period of one (1) year.

Please report any damage or missing pieces of your vanity to us immedidelivery.