
# **INSTRUCTION MANUAL**

SKU CODE:


# **DEC101**

FRONT

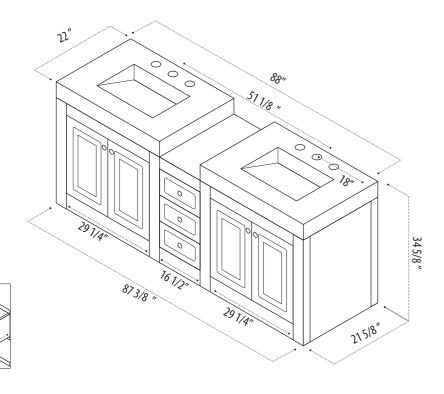

**COLLECTION:** Designer's Pick

**DIMENSIONS:** W 87 3/8" | D 22" | H 34 5/8"

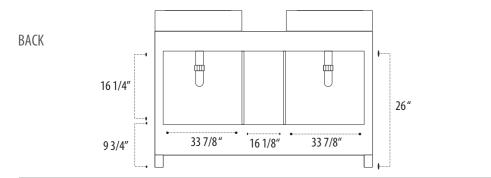

## **PACKING LIST**

- Pre-assembled cabinet
- 2 Sinks
- 2 Mirrors


- Mirror mounting screws
- Drain
- Instruction Manual


#### **WARRANTY**


Design Element warrants cabinets, mirrors, finishes and fittings to be free from defects in workmanship and materials under normal use and service for a period of one (1) year.

Please report any damage or missing pieces of your vanity to us immediately. These things must be reported no later than 30 days from the date of delivery.

# **Attaching Sink To Cabinet**

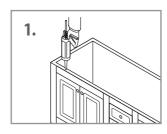


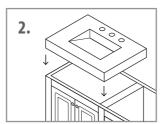





- **1.** Apply continuous stream of quality silicon glue to the top of the cabinet where the sink needs to be placed.
- 2. Now place the sink on the glued cabinet.
- 3. Do not use the sink instantly. Wait approximately for 24 hours for the Silicon glue to dry.

# **Installing The Drain On The Sink**

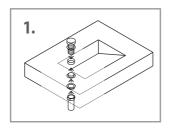


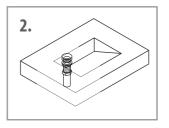


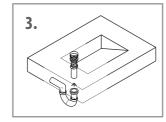


- 1. After you install the sink on the cabinet, Put the drain assembly inside the hole in the sink and fix it firmly
- 2. Tie up the mounting rubbers and rings from the bottom of the drain
- 3. Now that the drain is installed, you can connect the trap onto the drain.

# **Hanging Mirror On The Wall**

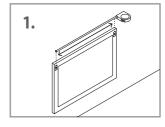

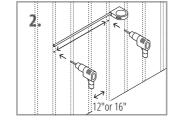



# 4.

- 1. Measure the distance between the screw holes at the back of the mirror.
- 2. Find the studs on the wall and drill two holes inside the studs as per your measurement.
- **3.** Insert the plastic plugs into the drilled holes. Insert screws into the plastic plugs. Leave the screws at least 0.5'' 0.75'' inches outside.
- **4.** Hang the mirror on to the screws.

## **SAFETY AND PRECAUTIONS**

- Please go through this entire instruction manual before making any attempt to assemble, operate or install the product.
- During installation, handle the sink with optimum care. They might break if hit hard on a solid surface.
- Don't start using the vanity right away. Wait for approximately 24 hours after installation so that the silicon glue can dry
- When scrubbing the cabinet while cleaning, make sure you do not remove or scratch the ⊠nish.

## **CARE AND CLEANING**

- Avoid using any type of rough cleaning material on top of the cabinet finish.
- Use mild liquid soap and water-dampened soft cloth to remove stains from the cabinet and to clean the marble countertop.
- For the glass part of the mirror, use ammonia-free cleaning products.

#### **CONTACT SUPPORT**

**PHONE:** (888) 487-4488

EMAIL: cs@designelementusa.com

ADDRESS: 8715 Boston place, Rancho Cucamonga, CA. 91730

www.designelementusa.com

